
FUNKY Monkey bars®

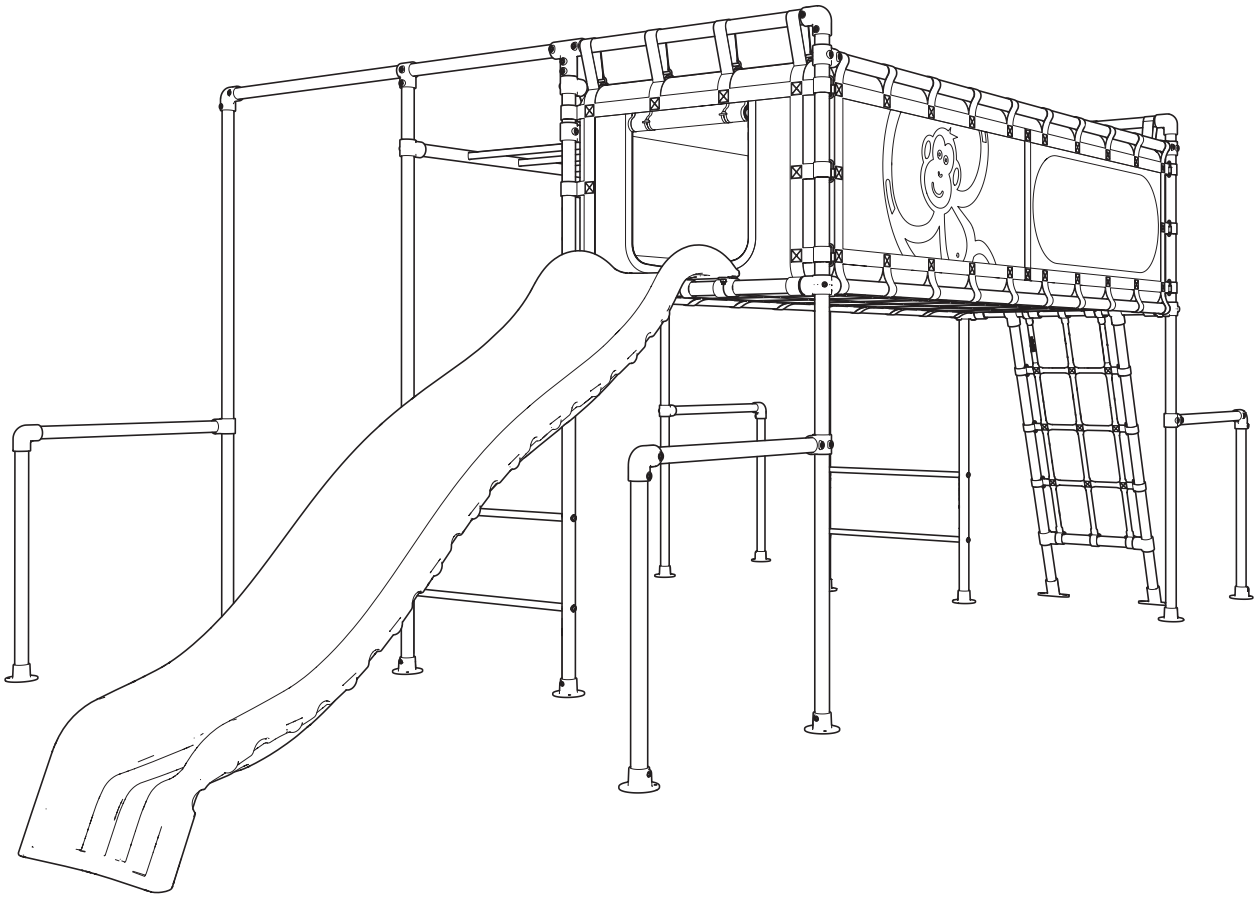

THE CLUBHOUSE & SLIDE EXTENSION

ASSEMBLY INSTRUCTIONS

CONTENTS

Warnings . . . . . Page 1
Assembly Tips . . . . . Page 3
Inventory . . . . . Page 4
Assembly Instructions . . . . . Page 6
- Prepare your unit . . . . . Page 6
- Add Fittings . . . . . Page 7
- Add Clubhouse Cubby . . . . . Page 8
- Assemble Frame . . . . . Page 9
- Tightening Straps . . . . . Page 10
- Assemble Cargo Net . . . . . Page 13
- Attach Slide . . . . . Page 15
- Finishing Touches . . . . . Page 16

Maintenance . . . . . Page 17

WARNING

PLEASE CAREFULLY READ ALL INFORMATION CONTAINED IN THIS ASSEMBLY MANUAL BEFORE YOU INSTALL AND USE YOUR FUNKY MONKEY BARS®.


SAFETY NOTICE

1. Any person handling or using the Funky Monkey Bars® products must follow the instructions as described in this document. The person in charge of assembling and using the equipment must ensure that the recommendations for use given in this document are seen by all users.
2. Only use the Funky Monkey Bars® after they have been fully assembled and after checking that the fittings are tightened properly (*refer to page 3 - Correct Tightening Method*).
3. DO NOT install your Funky Monkey Bars® over concrete, asphalt, packed earth, wood decking or any other hard surface. A fall onto a hard surface can result in serious injury or death.
4. Inspect all grub screws, bolts and nuts at the beginning of each play session to ensure your Funky Monkey Bars® are tight and secure.
5. Ensure all tubes are fully inserted into fittings until you hear the magic "CLUNK" sound.
6. Ensure your Funky Monkey Bars® are properly secure at ALL times. Pegs are in place and inserted fully into the ground.
7. DO NOT exceed the maximum load/weight limit as recommended by Funky Monkey Bars®.
8. Children should be supervised by an adult at all times.
9. Installing a gym/crash mat under the fall zone area of your Funky Monkey Bars® would be recommended for children learning this new skill. This will reduce the chance of injury and build the child's confidence while they build strength and master the skill.
10. Ensure you have thoroughly read your assembly and installation instructions and viewed our on-line installation videos at *https://www.funkymonkeybars.com/blogs/installation-maintenance-videos*
11. DO NOT climb, sit or stand on top of the monkey bar (horizontal ladder) section.
12. DO NOT jump from the top of any section of the monkey bar.
13. DO NOT use your Funky Monkey Bars® when wet as the steel will be slippery.
14. DO NOT attach items to your frame that are not designed specifically to be used with Funky Monkey Bars®, especially lower quality products that have not been approved by Funky Monkey Bars®.
15. Ensure the height of your Funky Monkey Bars® (horizontal ladder) are set at a level that is age appropriate.
16. DO NOT install your Funky Monkey Bars® over or near objects that could interfere with users in an unsafe way. Maintain a clear area around your Funky Monkey Bars®.
17. DO NOT use your Funky Monkey Bars® while under the influence of drugs and alcohol.
18. Wear clothing free of drawstrings, hooks, loops or anything that could get caught while using your Funky Monkey Bars® and result in entanglement and/or strangulation.


ASSEMBLY

1. Keep small children away from the Funky Monkey Bars® during assembly.
2. Do not attempt to use the Funky Monkey Bars® until it is completely assembled and every fitting is tight and secured.
3. Installation typically takes 1-2 hours to complete. Two people are recommended for assembly.
4. Ensure all fittings are tightened to the correct tightening method as described on page 3.
5. Assembly should be carried out on clean, dry, level surface


Please refer to the video section on the Funky Monkey Bars® website for more handy tips and assembly instructions at *http://www.funkymonkeybars.com/pages/videos*

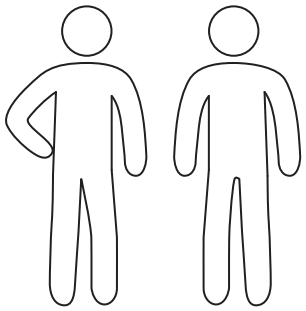

Assembly requires 2 adults.

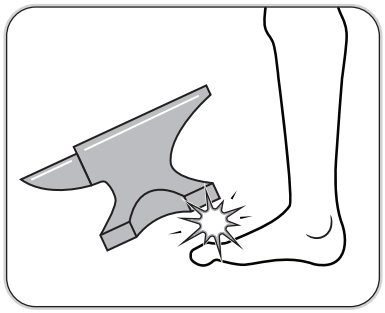

Heavy items !

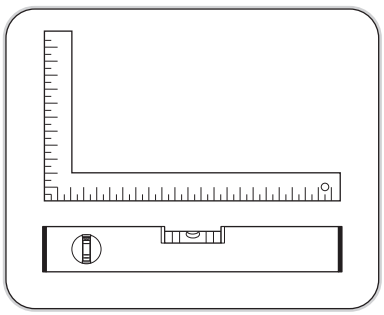

Work on flat level surface.

LOCATION

1. A safe fall zone around your Funky Monkey Bars® is essential. A minimum distance of 1.5m to 2m (5 ft to 6.5ft) is recommended around the elevated hanging points of your Funky Monkey Bars®.
2. Place your Funky Monkey Bars® on level ground, away from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires and remove any obstructions beneath your Funky Monkey Bars®.
3. Ensure your Funky Monkey Bars® are positioned away from retaining walls, pool fences, structures and other play equipment. Maintain a clear space around the whole perimeter of your Funky Monkey Bars®.
4. Place your Funky Monkey Bars® on the most level surface available.

MAINTENANCE


1. At the beginning of each heavy play session we recommend the following maintenance processes be performed on your Funky Monkey Bars®:
    - Tighten all bolts, grub screws and applicable hardware (as per page 3)
    - Lubricate all metallic moving parts as per instructions (flying fox, swing hooks etc)
    - Check all protective coverings on bolts, pipes, edges and corners. Replace if they are loose, cracked or missing.
    - Check all moving parts including swing seats, shackles, snap hooks, chains and trolleys for wear, rust, or other deterioration. Replace as needed.


2. Twice a month during play season we would recommend the following maintenance processes be performed on your Funky Monkey Bars®:
    - Tighten all connections and hardware
    - Check all protective coverings on bolts, pipes, edges and corners. Replace if they are loose, cracked or missing.

3. Once a month during play season we would recommend the following maintenance processes be performed on your Funky Monkey Bars®:
    - Lubricate all metallic moving parts as per instructions (flying fox, swing hooks etc). If swings start to squeak then lubricate swing hooks.
    - Check all moving parts including swing seats, ropes, chains and trolleys for wear, rust, or other deterioration. Replace as needed.
    - Owners shall be responsible for maintaining the legibility of any warning labels.

For additional information concerning your Funky Monkey Bars®, please contact our customer service team or check our website for any important updates. Phone - 1300 912 198 or www.funkymonkeybars.com


CORRECT INSERTION INTO FITTINGS - (INDICATIVE DIAGRAM SHOWN)

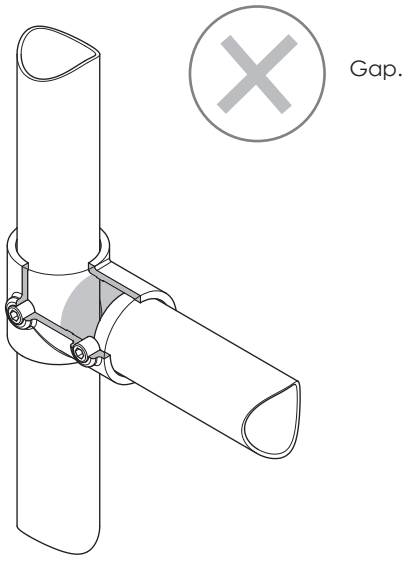

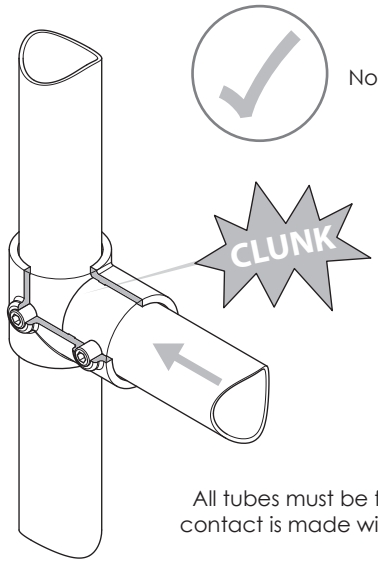


All tubes must be fully inserted until contact is made with adjoining tube.

CORRECT TIGHTENING METHOD OF GRUB SCREWS - (INDICATIVE DIAGRAM SHOWN)

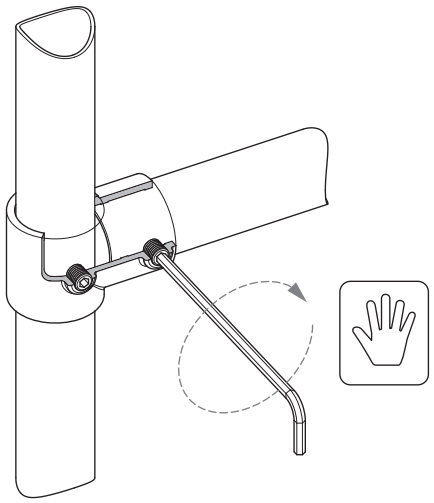


1. With long end of allen key, hand tighten grub screw as much as possible.

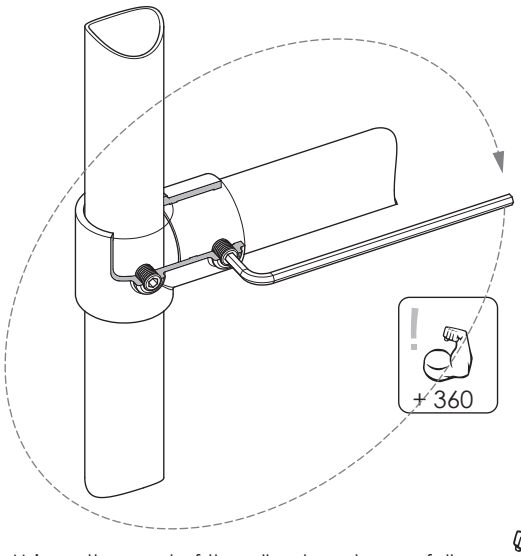


2. Using other end of the allen key do one full 360 degree turn as a minimum, use muscles!

FIXING TYPICAL ORIENTATION - (INDICATIVE DRAWING SHOWN)

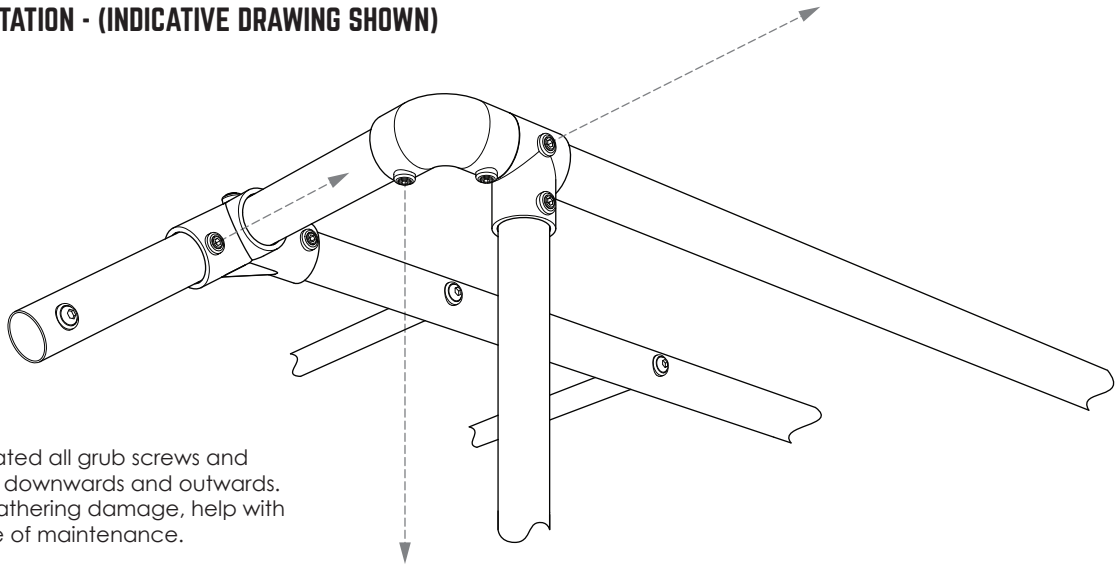


Unless otherwise stated all grub screws and fittings should face downwards and outwards. This will reduce weathering damage, help with assembly and ease of maintenance.


TOOLS REQUIRED FOR INSTALLATION

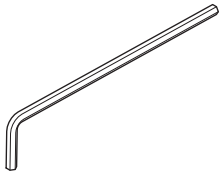


1x
6mm Allen key
(Included)

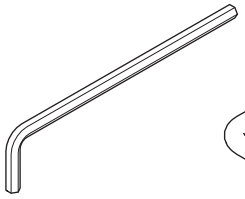


1x
8mm Allen key
(Not included)

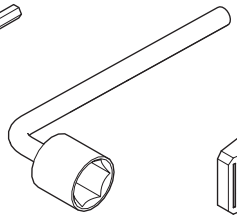

1x
17mm Spanner
(Included)

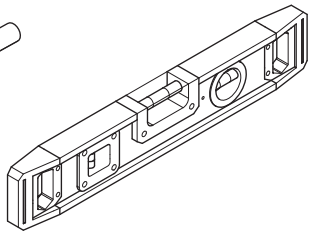


1x
Spirit Level
(Not included)

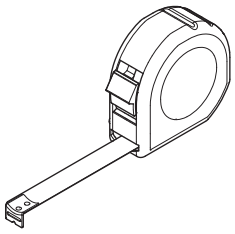


1x
Tape Measure
(Not included)


FITTINGS

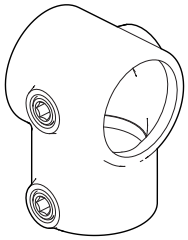


8x 101-D48

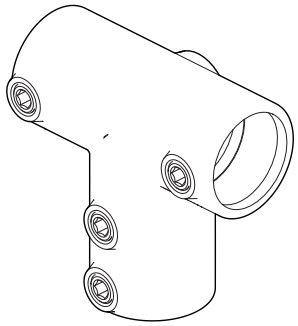


2x 104L-D48

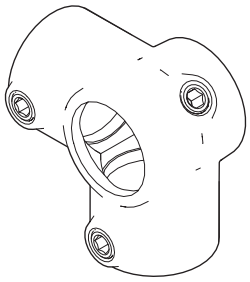


4x 116-D48

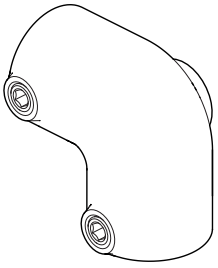


2x 125-D48

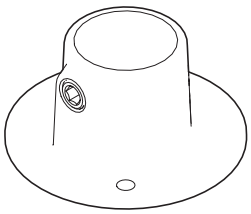

2x 131-D48

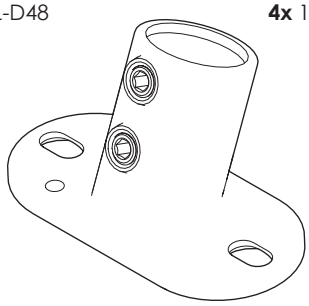

2x 133-D48

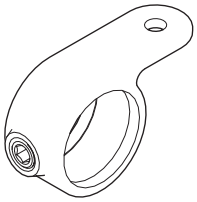

3x 199-D48

TUBES


1x
Tube for Small Cargo Net

48Dia. x 500mm




4x
Tube

48Dia. x 1040mm



2x
Tube for Small Cargo Net

48Dia. x 1475mm




2x
Tube

48Dia. x 2300mm




4x
Tube


48Dia. x 2950mm (Not to scale)




HARDWARE AND ACCESSORIES




1x
Slide

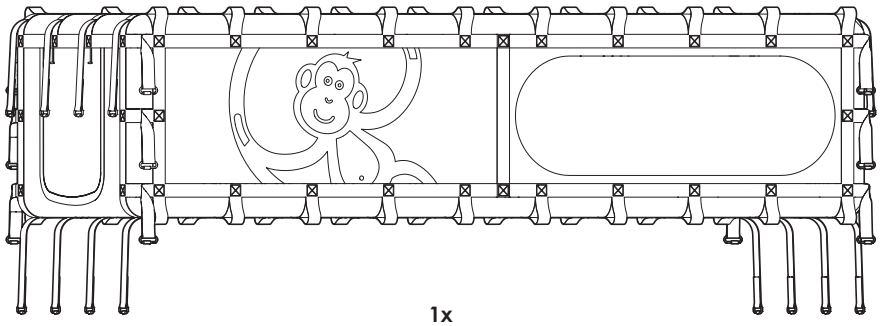


1x
Clubhouse

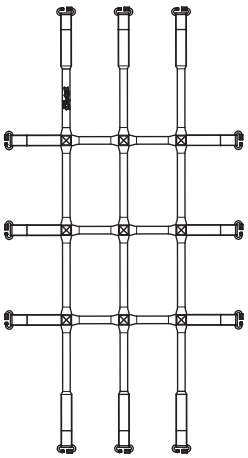

1x
Small Cargo Net

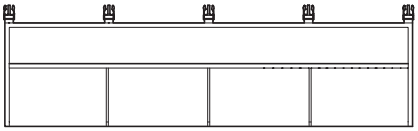

1x
Attachable Pockets

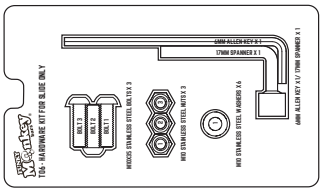

1x
T06 - Hardware Kit for Slide




1x
Logo Plate (Not to Scale)


One of the best things about a Funky Monkey Bar is the ability to add new equipment and accessories as your child and family grows. You can swap or add accessories to your existing frame, or add extra frames that will give you more versatility to attach equipment. Check out what we've got in store now at...


WWW.FUNKYMONKEYBARS.COM

01 PREPARING YOUR UNIT

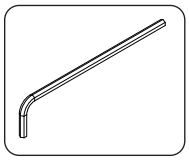


Illustrated below are the fittings that need to be removed to allow you to add a single to double swing bay extension and the clubhouse cubby. Please note that the example pictured may be different to your unit but the steps required to complete this assembly are likely the same.

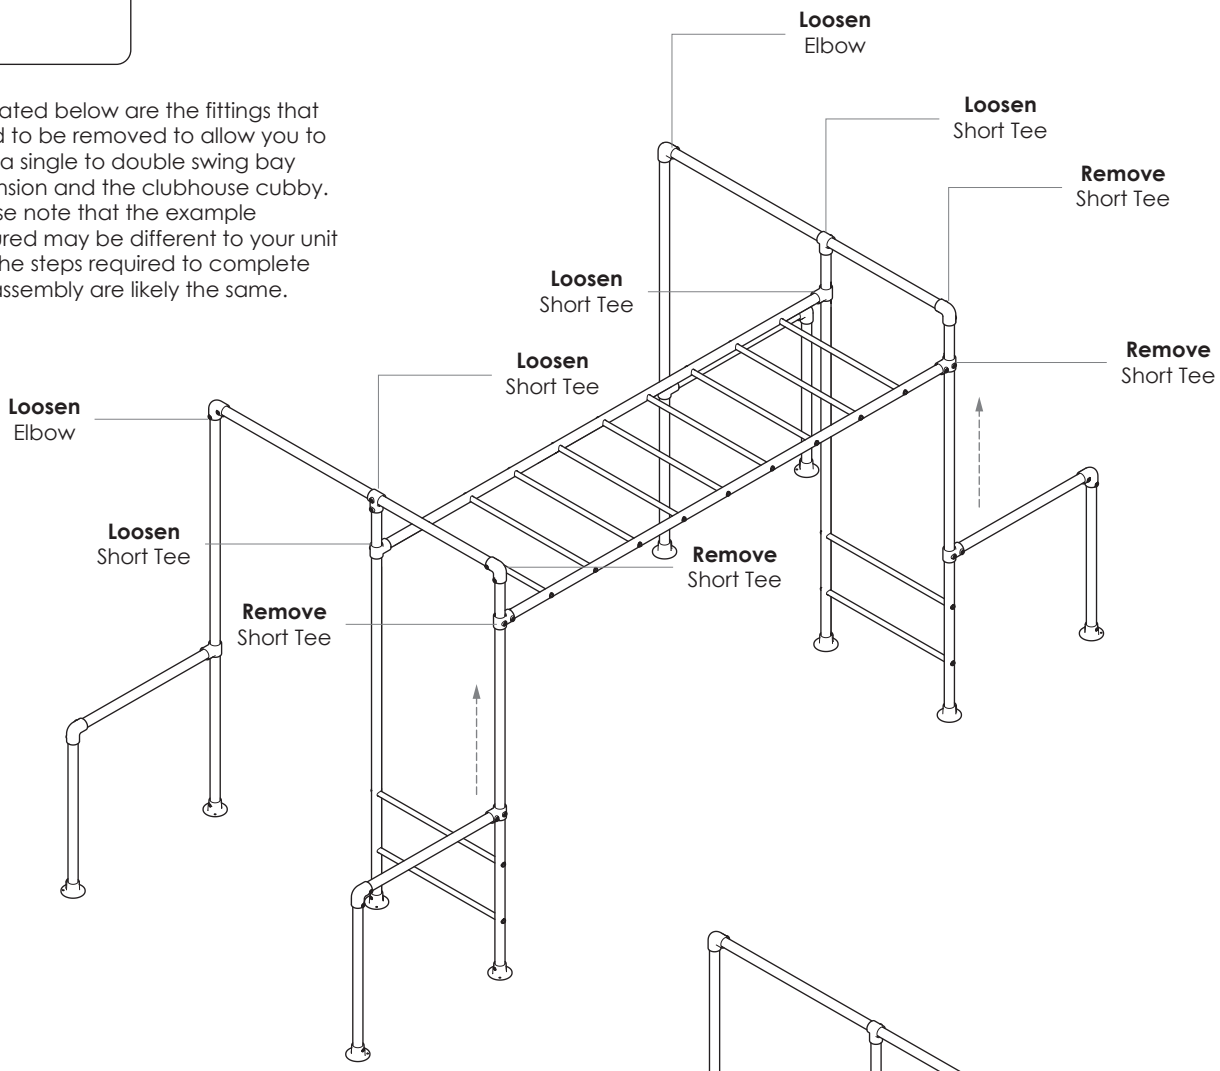


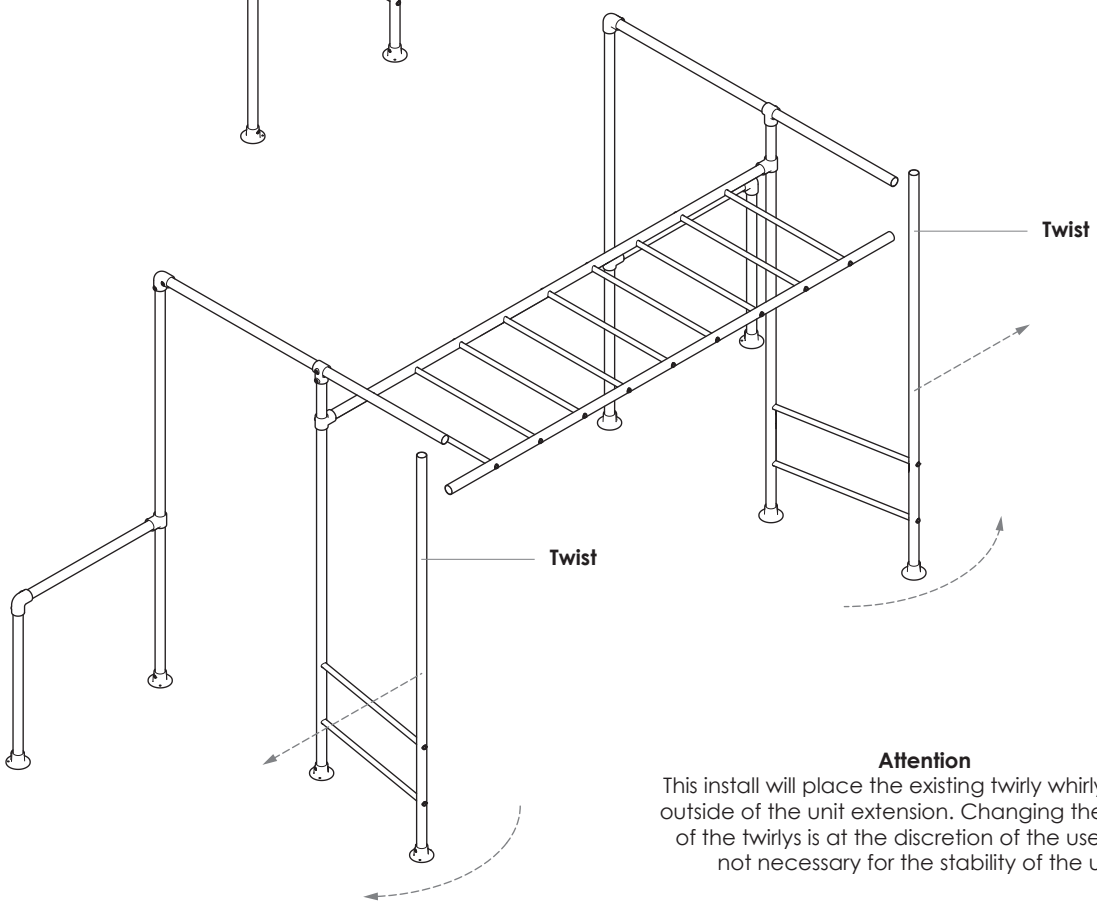


Attention
This install will place the existing twirly whirlys on the outside of the unit extension. Changing the position of the twirlys is at the discretion of the user and is not necessary for the stability of the unit.

02 ADD FITTINGS

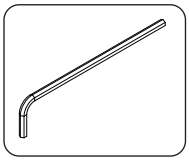


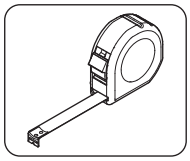


Assemble the fittings as shown below.
Lightly tighten for later adjustment.
Use a measuring tape to get the fittings in the approximate position.
Add two 2950mm poles.

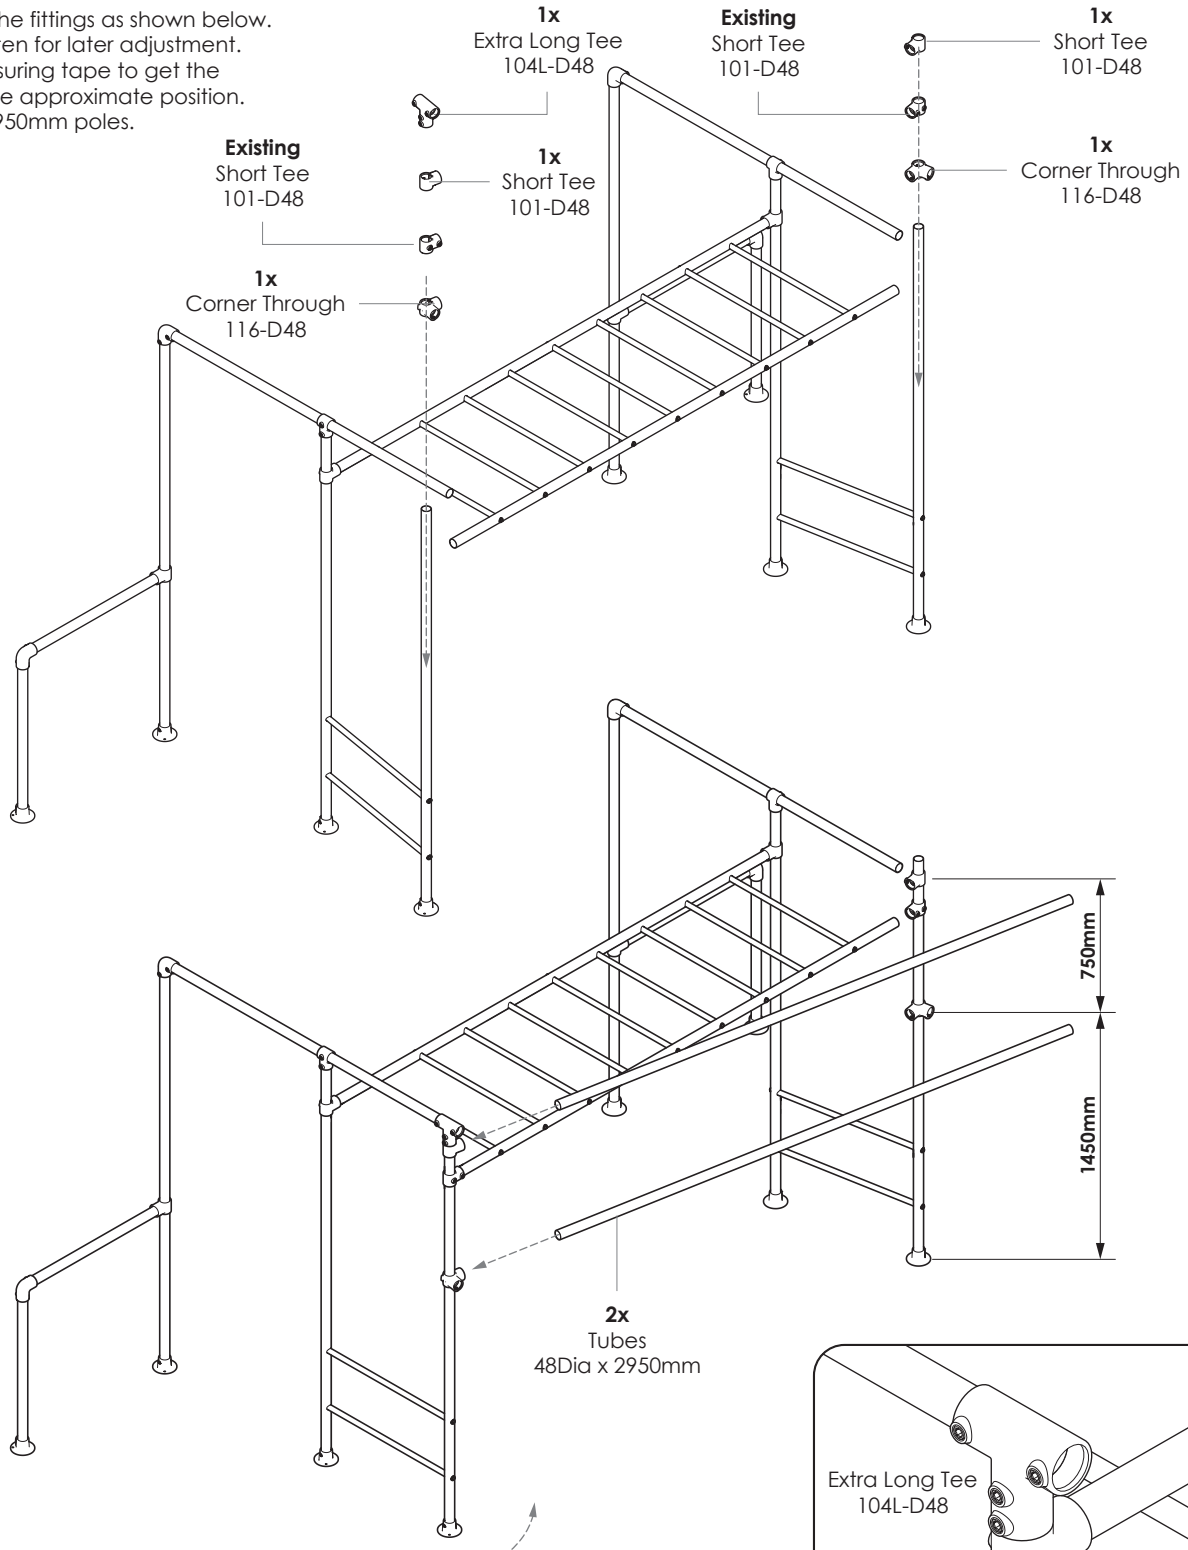


Attention
The position of the newly added short tees sit under the 104L-D48 Extra Long Tee

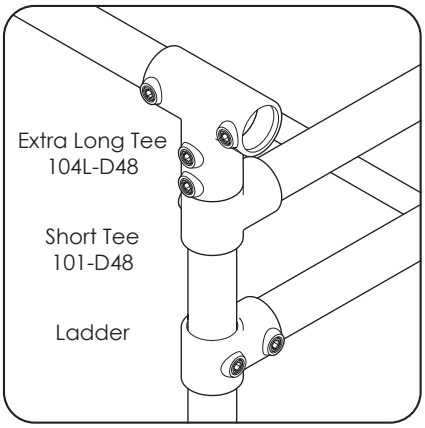



03 ADD THE CLUBHOUSE

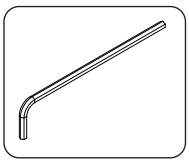

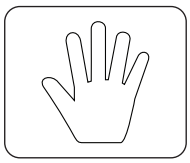


Assemble the parts as shown below. Feed two 48Dia x 2950mm tubes through the fixed hoops side of the clubhouse. Pull the clubhouse towards the front of the unit.

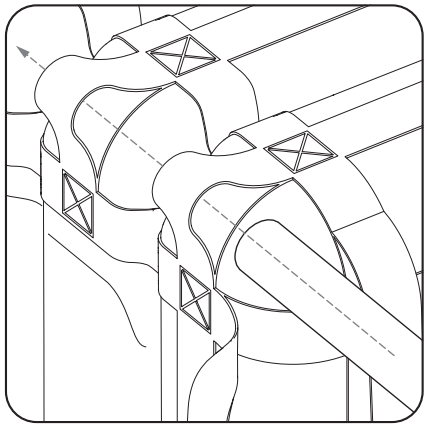

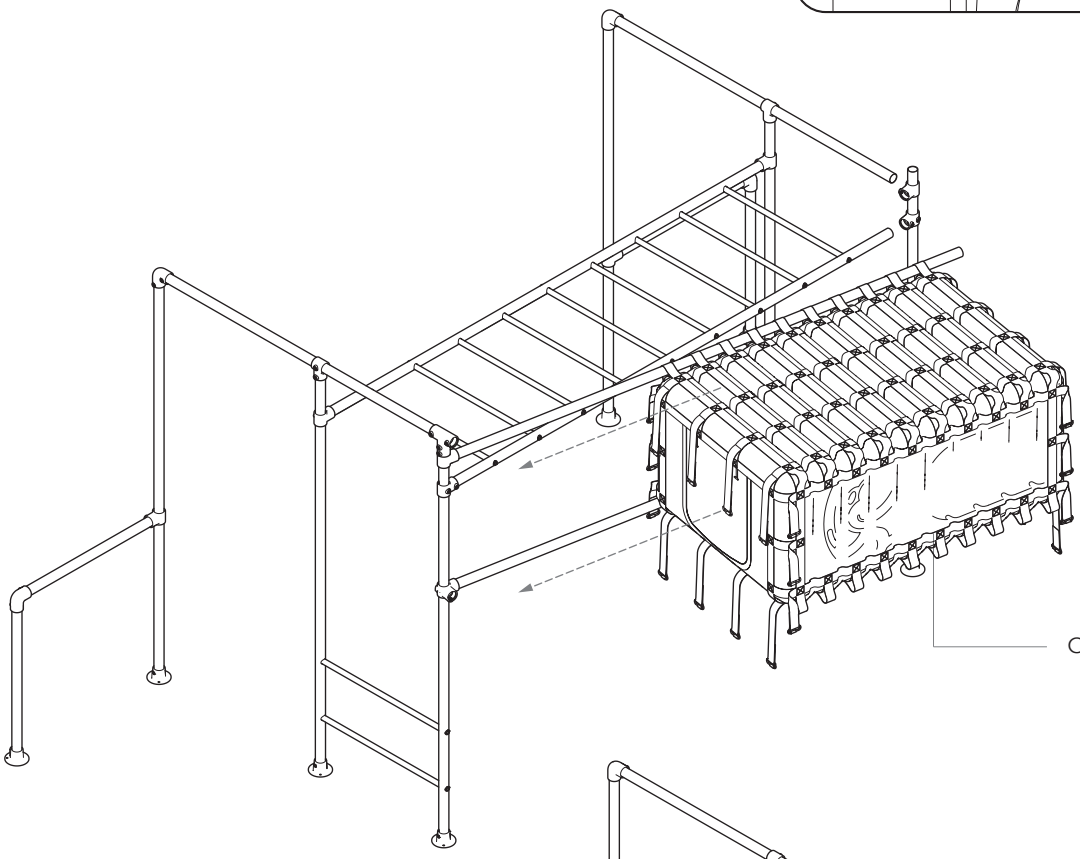


1x
Clubhouse
Cubby

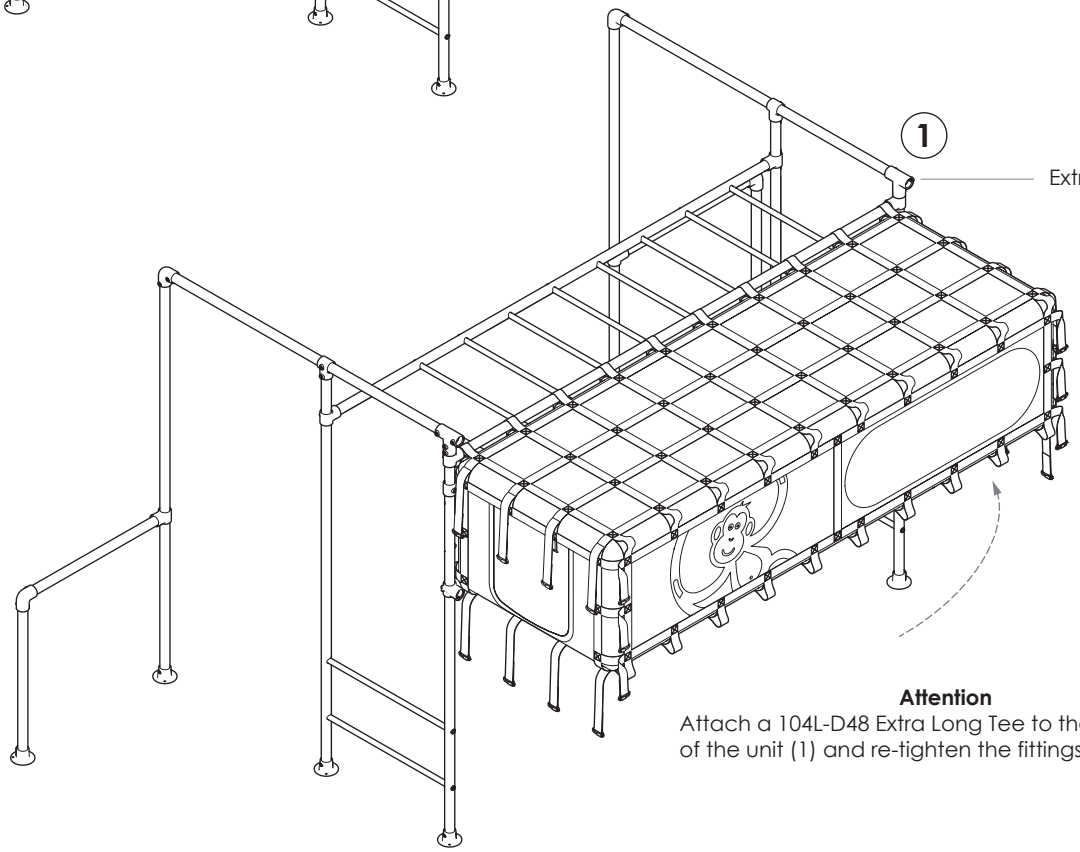


1x
Extra Long Tee
104L-D48


Attention
Attach a 104L-D48 Extra Long Tee to the other side of the unit (1) and re-tighten the fittings in place.


04 ASSEMBLE FRAME

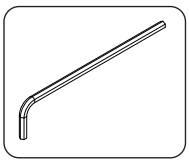

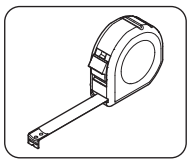



Assemble the parts as shown below.
Loosely tighten the fittings in place to allow for adjustment at later stages.

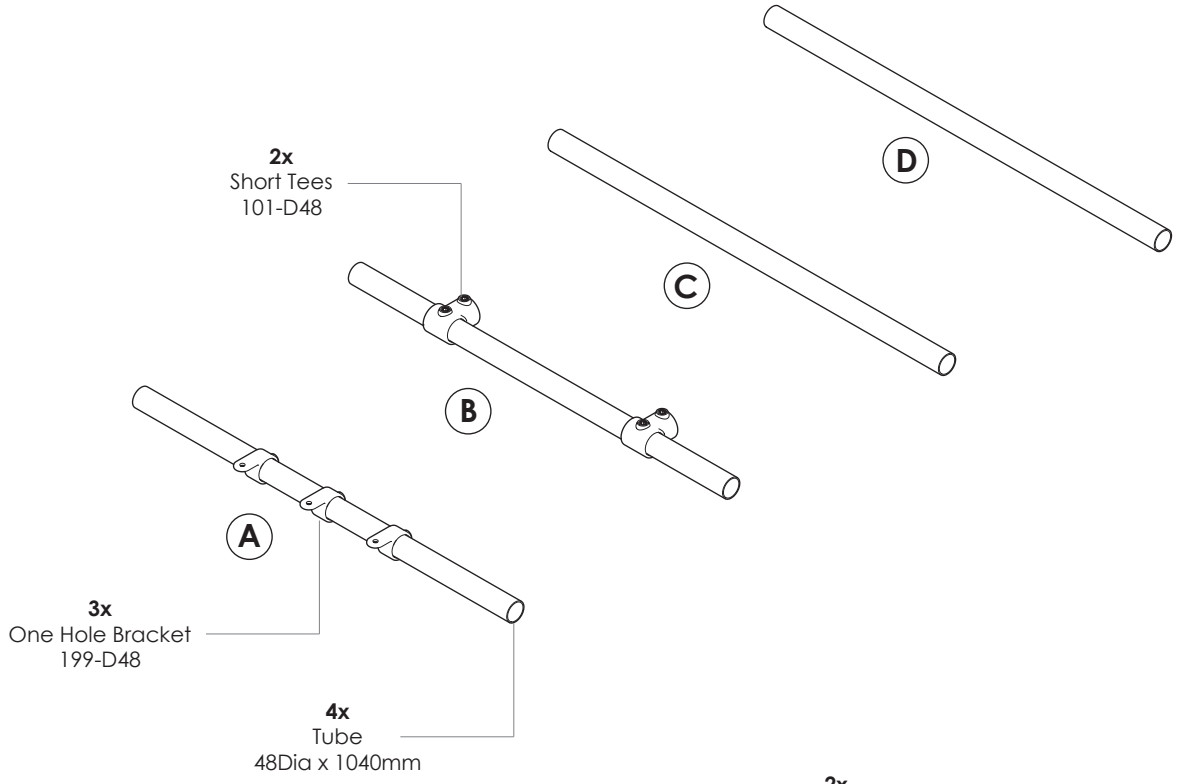

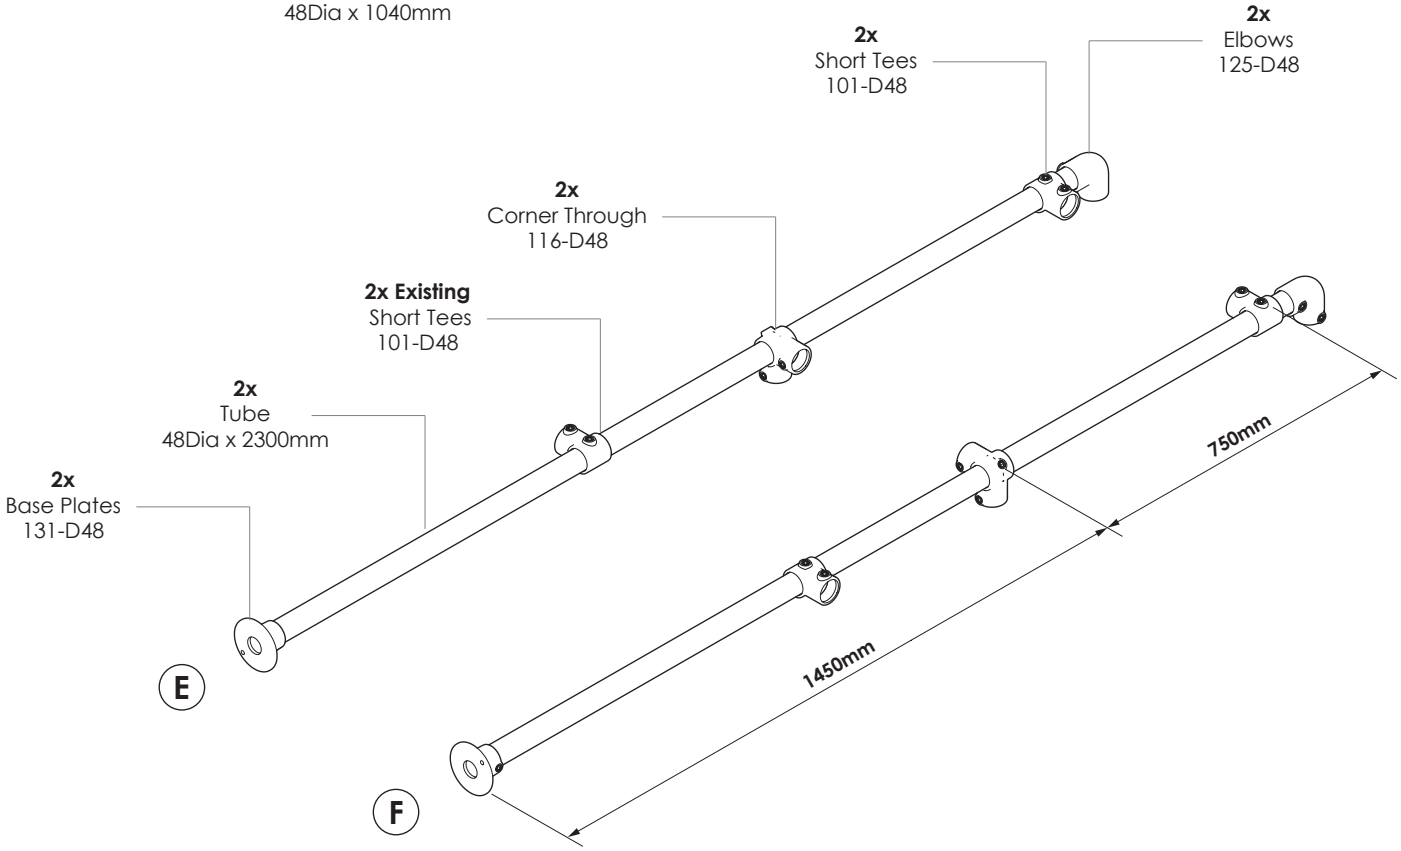



05 FRAME ASSEMBLY CONTINUED

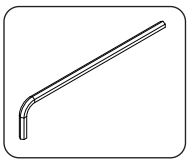


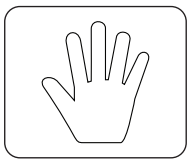



Assemble the components as illustrated. Position the tubes correctly and tighten the grub screws fully. Loop the straps over the top tube, then secure them in place using the quick links.

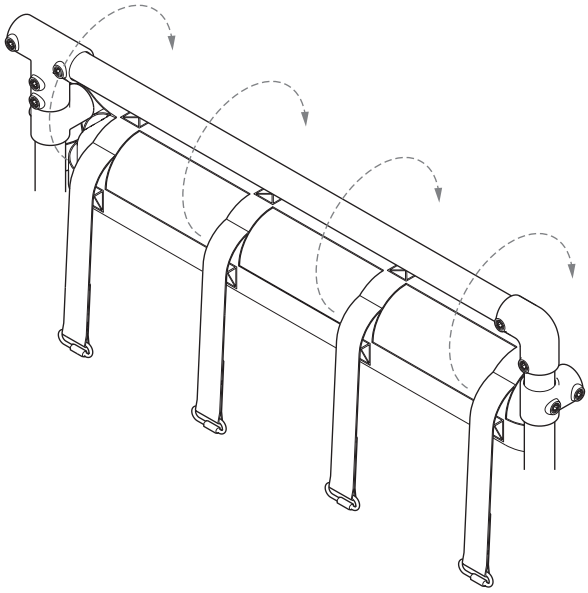

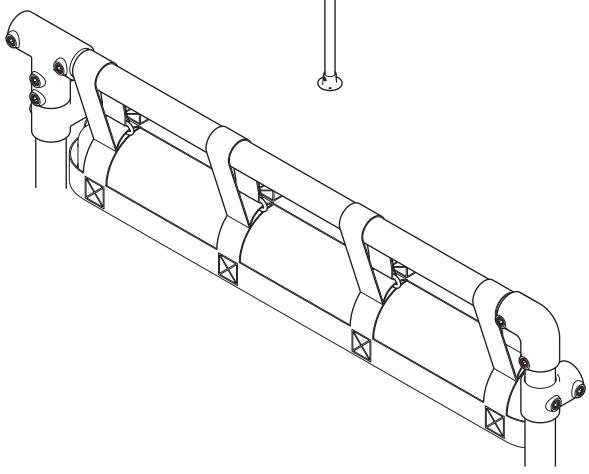

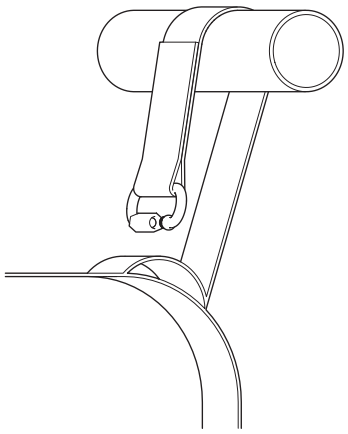


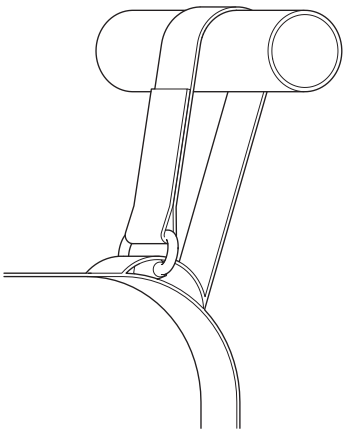


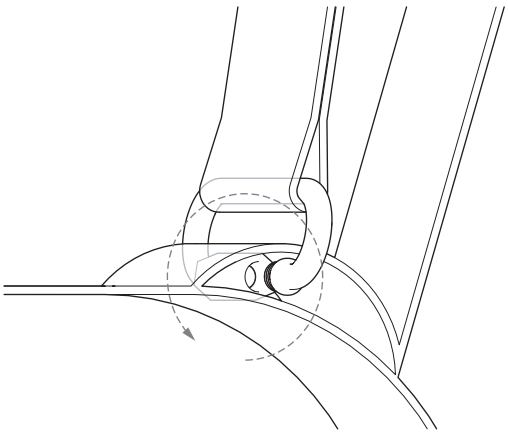



06 TIGHTENING STRAPS

Loop the straps around the sides and bottom tubes, secure them in place using the quick links.

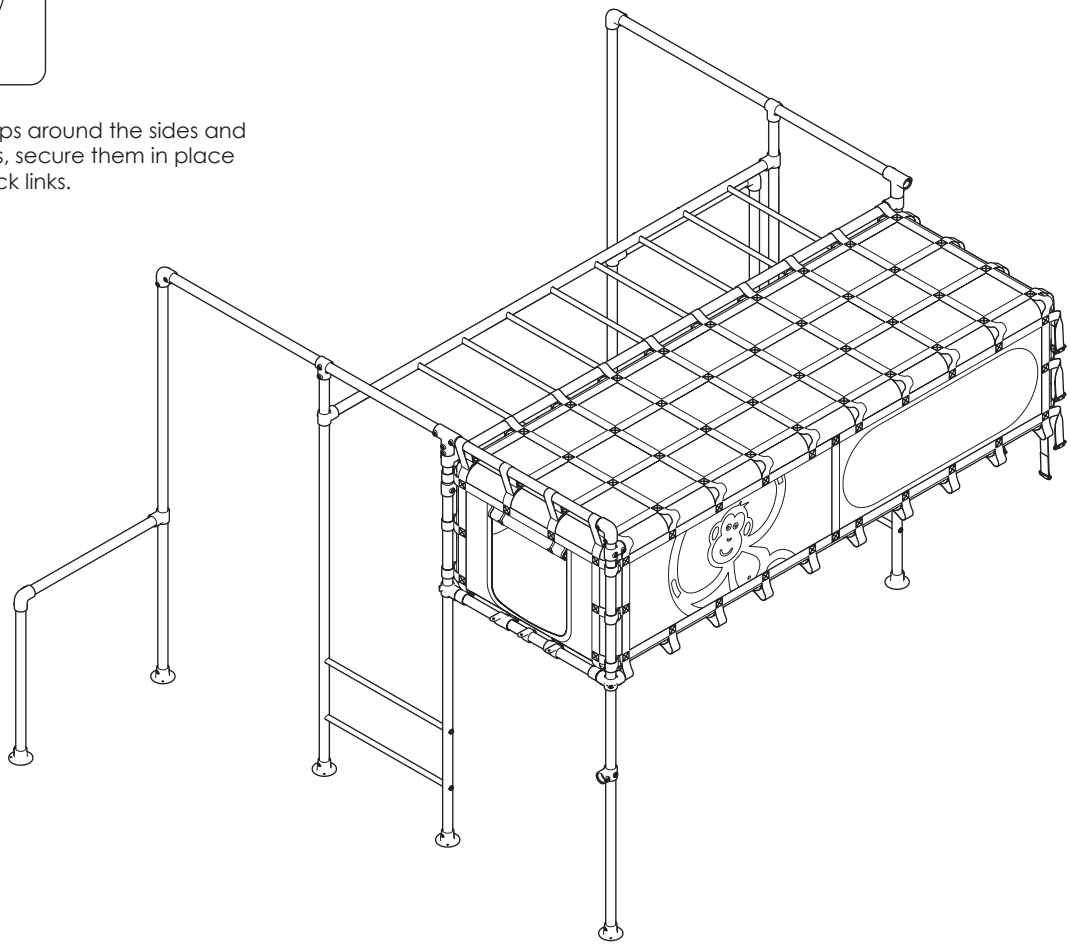


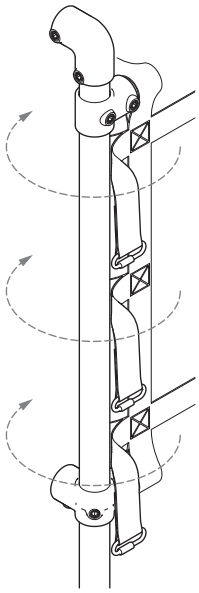


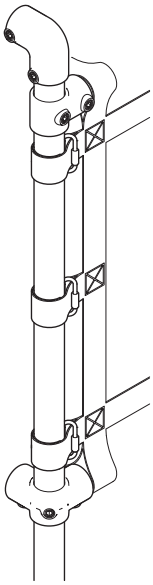

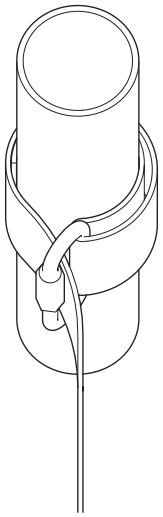


07 ATTACH TUBES

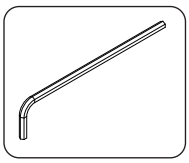

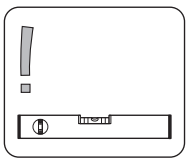

Feed two 48Dia x 2950mm tubes through the fixed hoops of the clubhouse. Fully tighten all screws.


2x
Tubes
48Dia x 2950mm

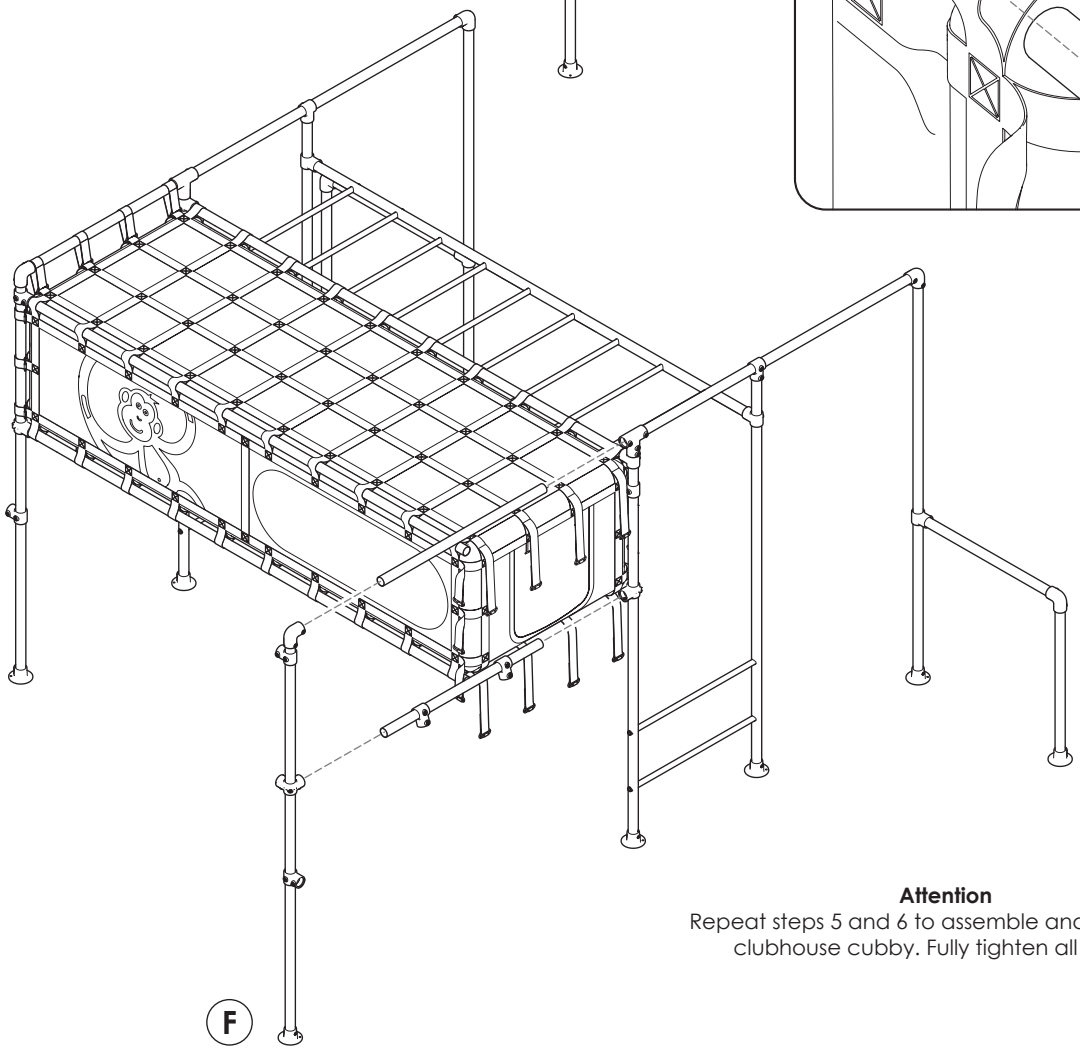


Attention
Repeat steps 5 and 6 to assemble and secure the clubhouse cubby. Fully tighten all screws.


F


08 ASSEMBLE CARGO NET FRAME

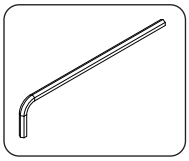


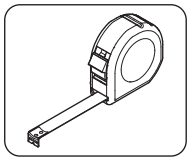

Assemble the fittings as shown below.
Lightly tighten for later adjustment.
Use a measuring tape to get the fittings in the approximate position.

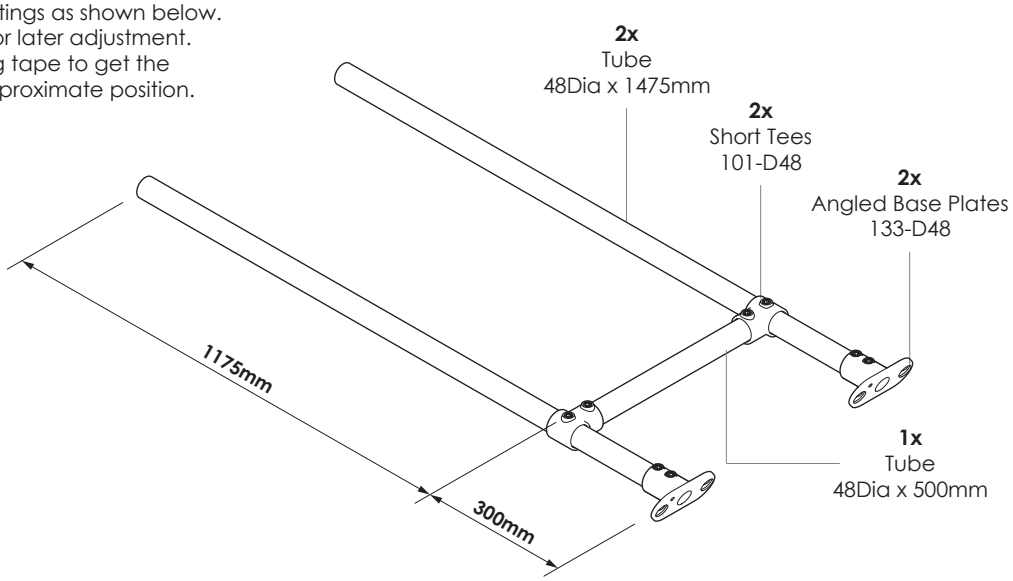


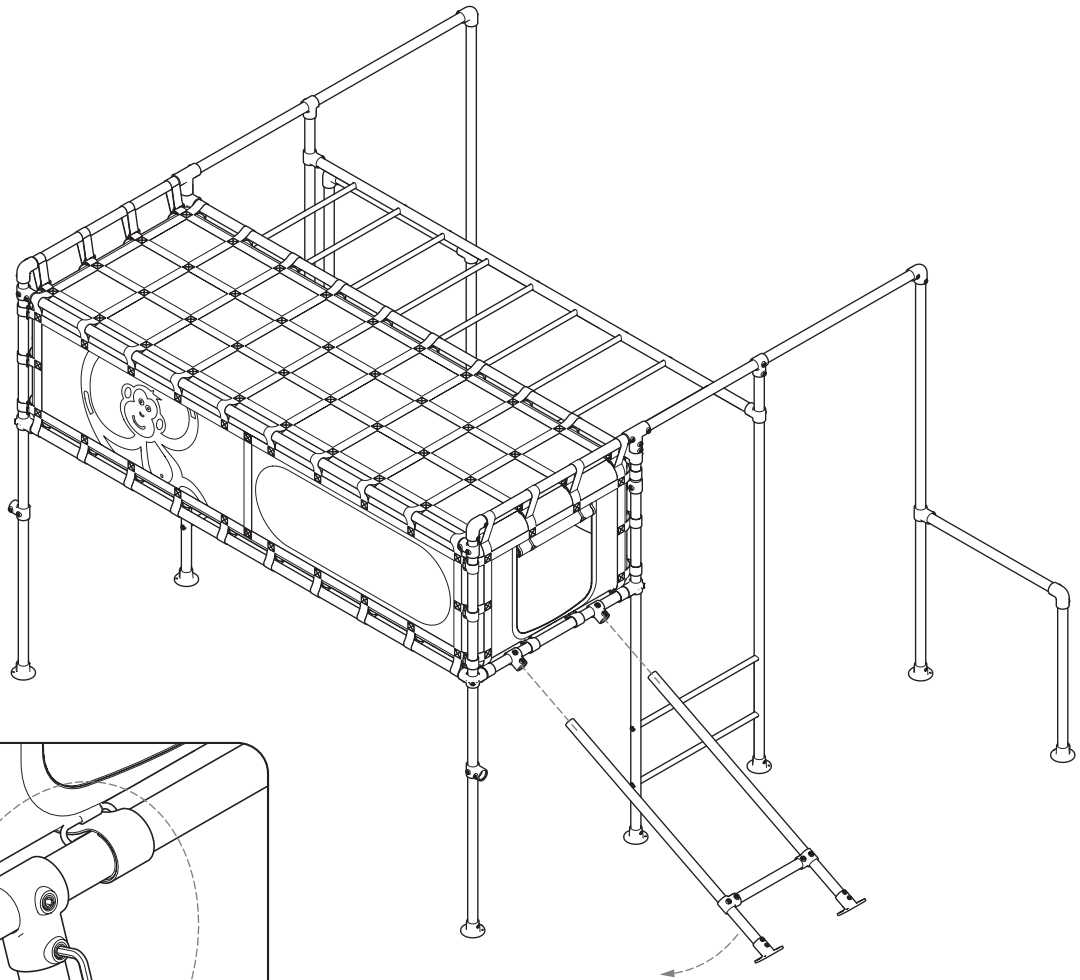


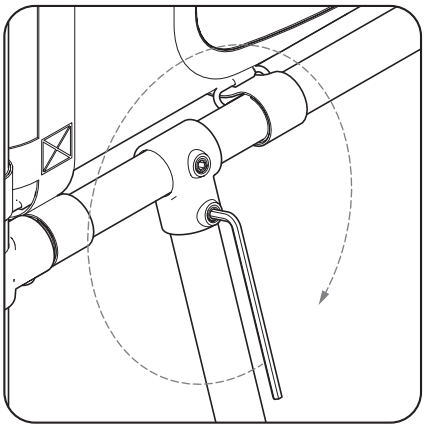



09 ATTACH CARGO NET


Loop the cargo net straps over the tube and thread them through the quick links. Tighten the top quick links first. Then tighten the quick links on both sides of the cargo net, followed by the bottom quick links.
For easier tensioning, keep the short tees and bottom tube loose during installation. Apply downward pressure to the tube to tension the cargo net, then fully tighten the short tees

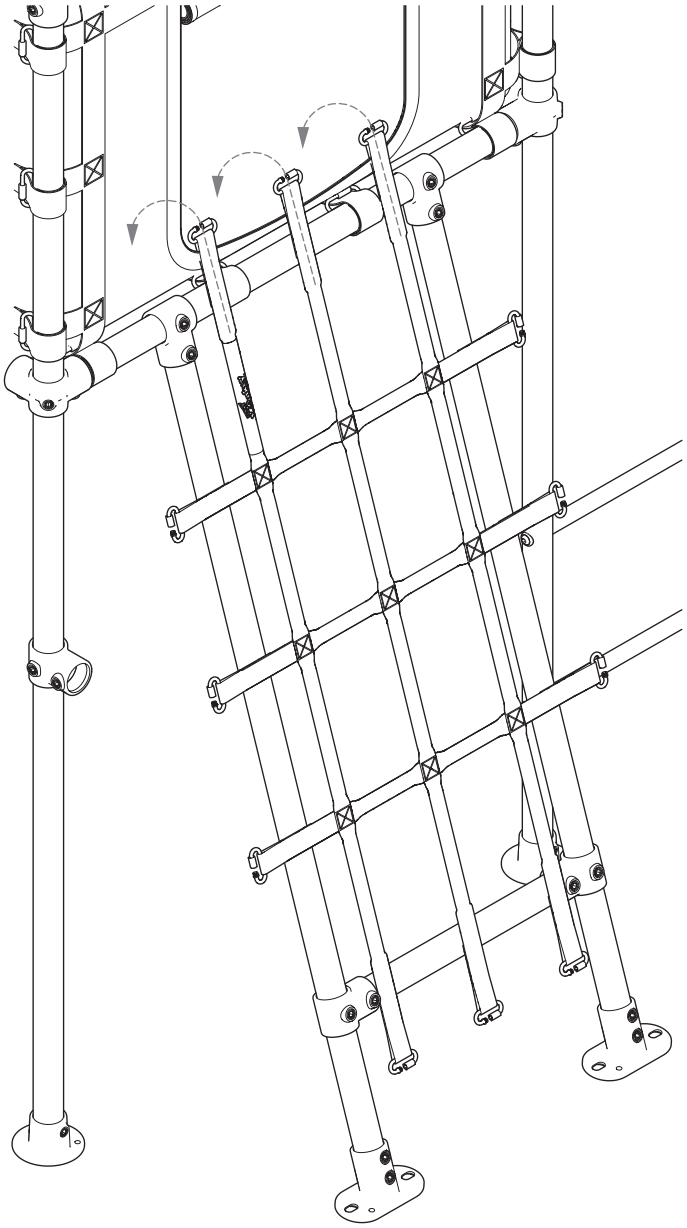

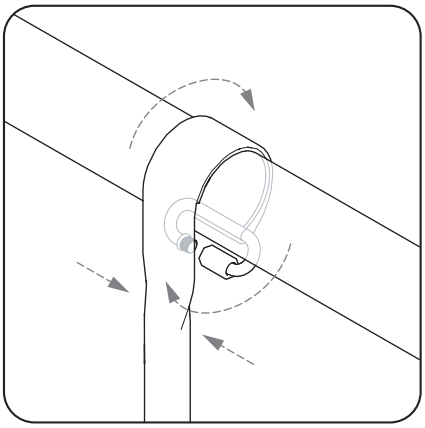


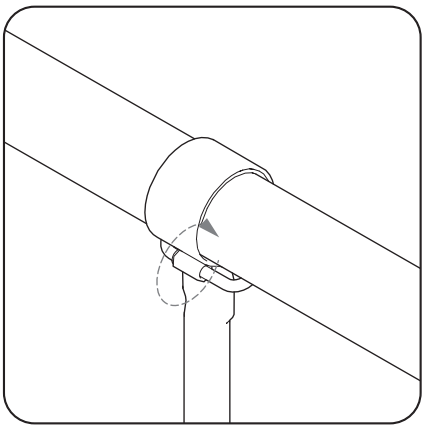


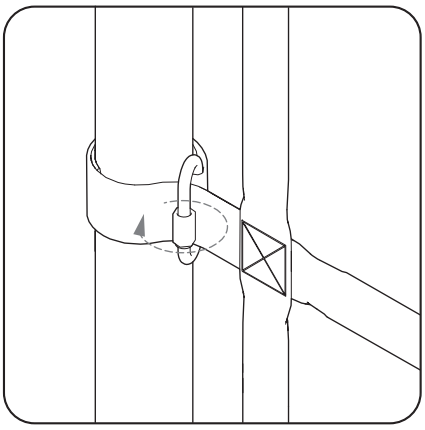

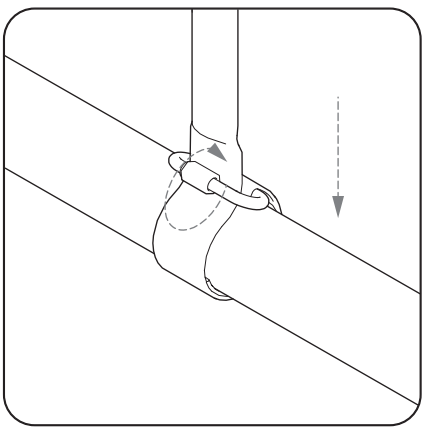



10 ATTACH SLIDE

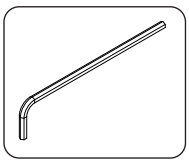


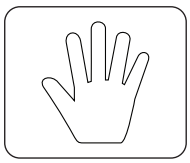


Lift the slide onto the three 198-D48 bracket fittings and align the holes. Add the M10 washers and bolts as illustrated below. Fully tighten all bolts and screws.

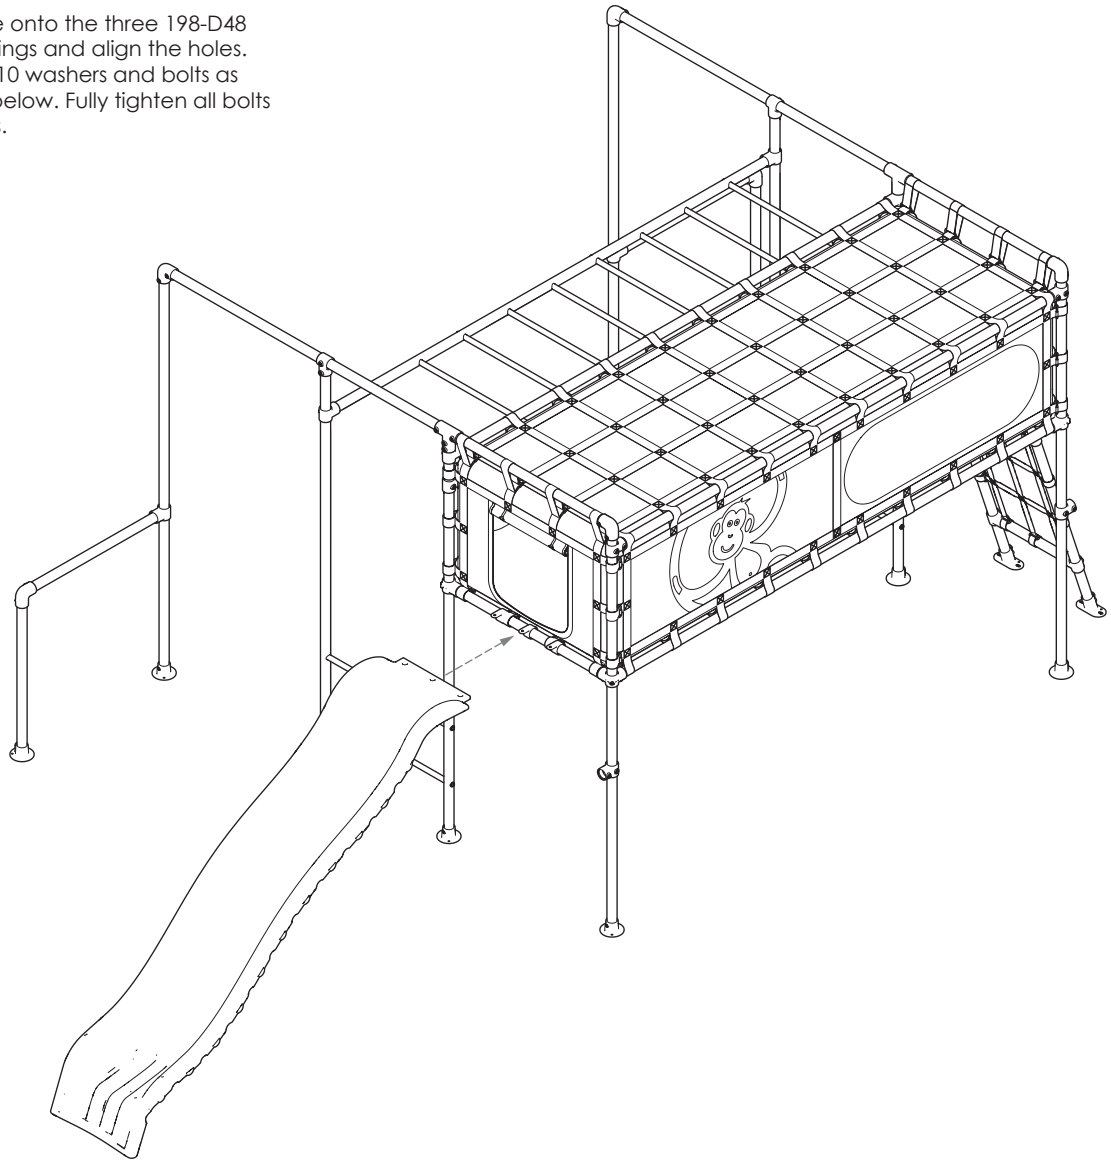


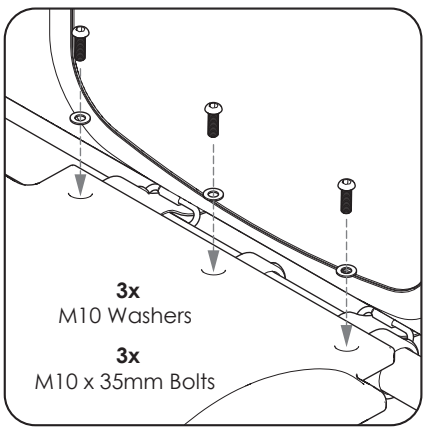


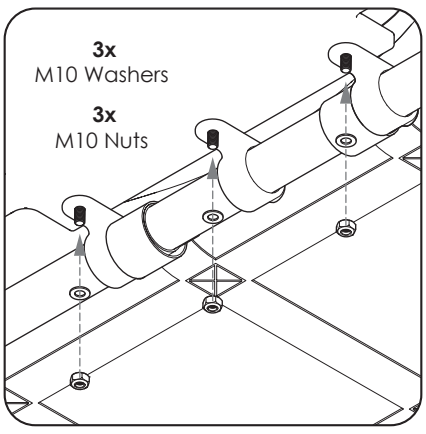

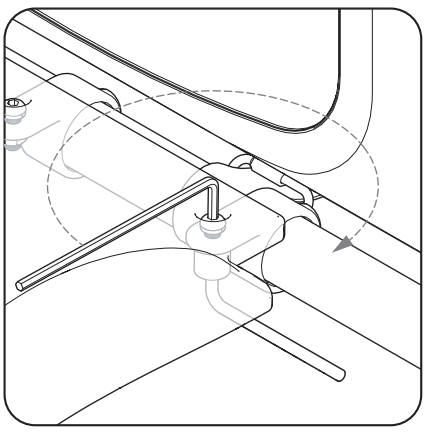



11 FINISH

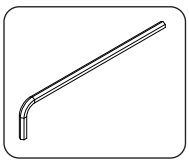

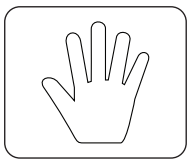



Re-attach the twirly whirlies. Fully tighten all screws.
Add the clip-in pockets to the inside of the clubhouse.

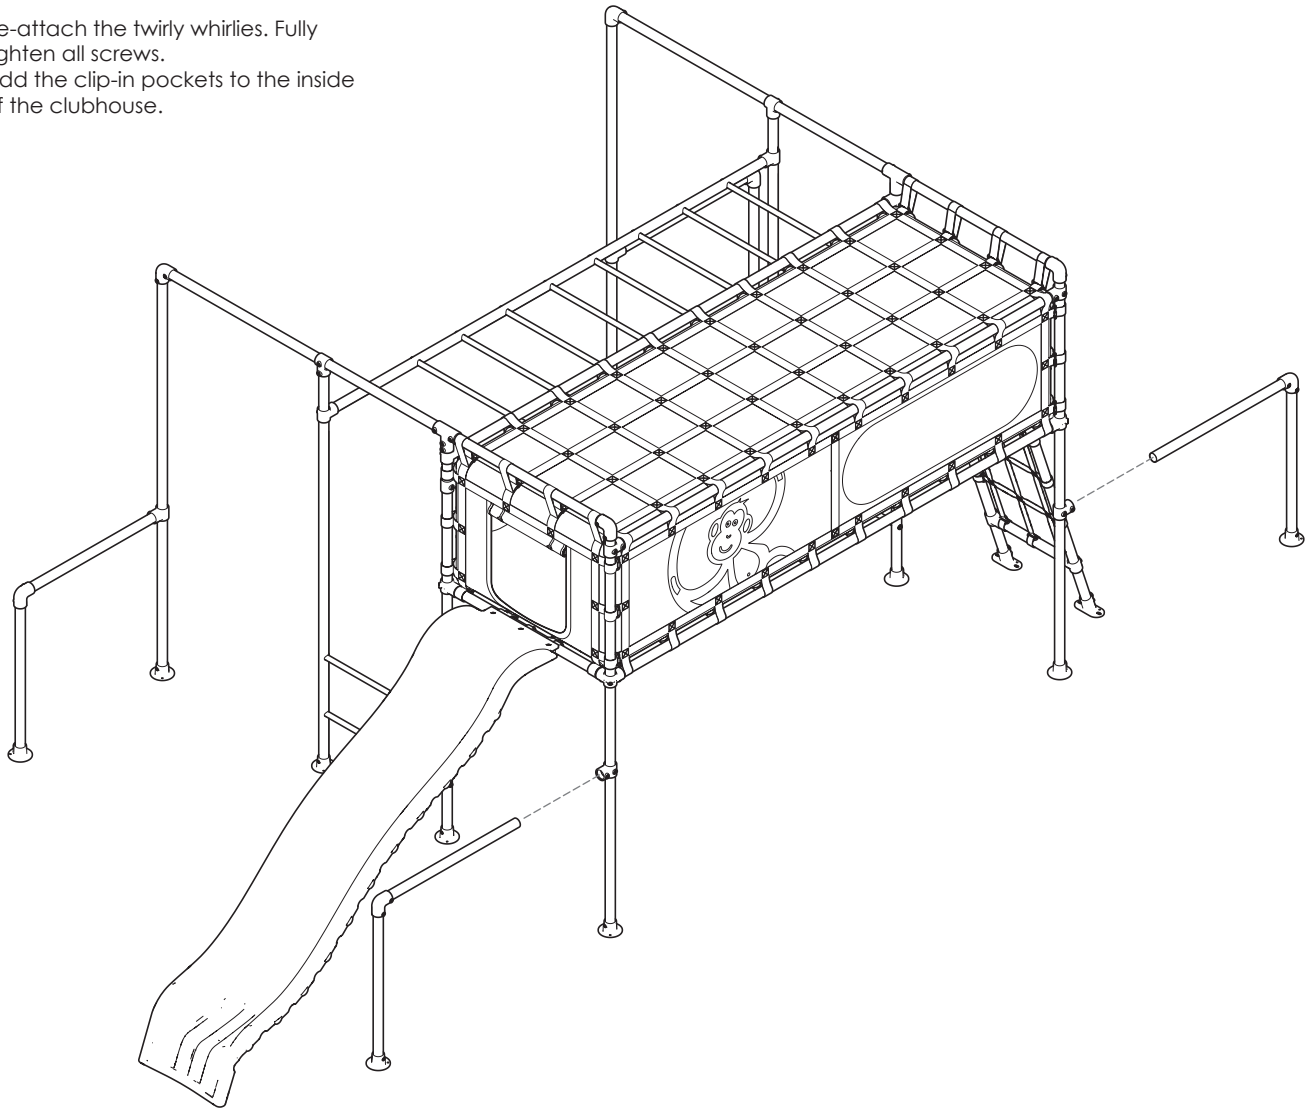

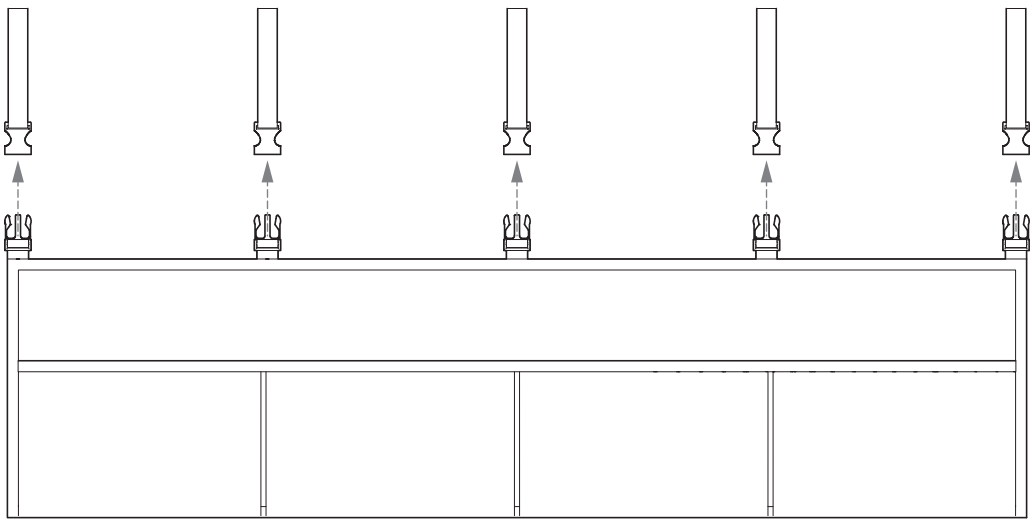

12 MAINTENANCE.

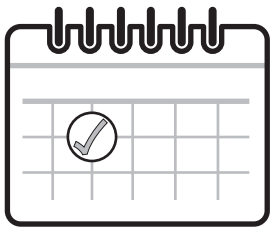

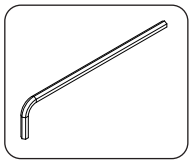

At the beginning of each heavy play session (especially a party) and twice a month during play season ensure;

1. Tighten all hardware - grub screws, nuts and bolts.
2. Pegs are in place and fully secure.
3. Lubricate all metallic moving parts with WD40 or Vaseline - (trolley and swing hooks.)
4. Ensure your frame is level and square.

FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY OR DEATH.

FOR MORE INFORMATION AND ASSEMBLY TIPS PLEASE REFER TO OUR WEBSITE VIDEO INSTRUCTION SECTION AT HTTP://WWW.FUNKYMONKEYBARS.COM/PAGES/VIDEOS

13 HAVE FUN

FUNKY Monkey bars®

ABN 72 164 496 520

1300 912 198

info@**funkymonkeybars**.com

www.**funkymonkeybars**.com

8/307 Stock Road,
O'Connor WA 6163

WE ARE SOCIAL MONKEYS

AUSTRALIAN MADE AND OWNED

Australian Government
IP Australia

All Funky Monkey Bars® designs are registered and protected under IP Australian certification.